

OZZ Grille Kit Ford Transit Custom 2024-2026

88980

Mounting



1. Fit the cutting guide into the grille. The guides are marked SL1/L2 and SR1/R2 for the left- and right-hand sides respectively.



2. Cut along the cutting template marked SL1/L2 and SR1/R2 for the left- and right-hand sides respectively.




3. Release the cut section from the grille.



4. Install the brackets on the product. The brackets are marked L1/L2 for the left-hand side and R1/R2 for the right-hand side.



5. Install the product with the brackets into the grille. When a clicking sound is heard, the product is correctly secured in place.

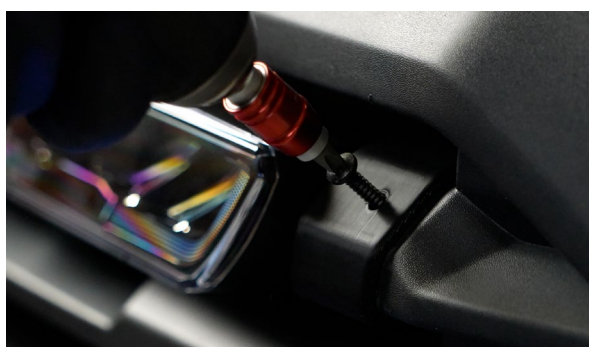

6. Secure the product using the supplied screw on parts L2 and R2.

OZZ Grille Kit Ford Transit Custom 2024-2026

88980



7. Connect the product to the wiring harness using the DT connectors.



8. Connect the wiring harness to the positive (+) and negative (-) terminals.



9. Connect either digitally (via XBB) or analog connection.